
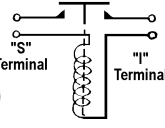






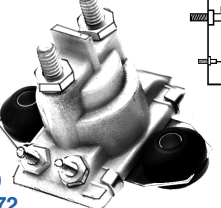





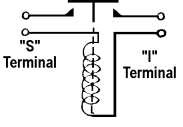
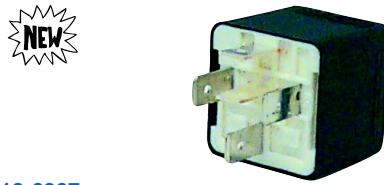


 <p>18-5810 AP# 13407 SOLENOID Horizontal Post</p>	  <p>18-5815 AP# 2821 SOLENOID Replaces: 89-68258A4, 89-853654A1</p>	  <p>18-5816 AP# 2719 SOLENOID Replaces: 89-96054, 89-96054T Flat Bracket</p>
  <p>18-5817 AP# 2718 SOLENOID Replaces: 89-96158, 89-96158T Vertical Post</p>	  <p>18-5818 AP# 2812 SOLENOID Replaces: 89-818864, 89-818864T</p>	  <p>18-5819 AP# 2372 SOLENOID Replaces: 89-818997A1, 89-818997T1</p>
  <p>18-5820 AP# 2813 SOLENOID Replaces: 89-818999A2, 89-825842A1, 89-850188T1</p>	 <p>18-5834 AP# 2814 SOLENOID Replaces: 89-817109A2 For : 75 HP (3 cyl.) S/N G127500 & UP</p>	  <p>18-5836 AP# 804 SOLENOID Replaces: 25661, 256611, 25661T1</p>
 <p>18-6267 RELAY 12 Volt, 30 Amp Replaces: Mercury 87-18211</p>	 <p>18-5729 POWER TRIM RELAY Replaces: 87-18211 For : 35 (2 cyl.) (with Ram Trim) OC159200 & UP 60 (3 cyl.) (with Ram Trim) OB122920 - OD000749</p>	 <p>18-5737 POWER TRIM RELAY Replaces: 87-19761 For : 40 (4 cyl.) (with Relays) OC159200 & UP</p>

OUTBOARD

SOLENOID APPLICATION

HP	Beg. S/N	End. S/N	Starter Solenoid	Power Trim Solenoid	Power Trim Relay
6/8/9.9	A197112	OD280999	18-5816	—	—
15	B292414	& UP	18-5816	—	—
18	5837437	& UP	18-5816	—	—
20	4709593	6443972	18-5815	—	—
20	6443973	& UP	18-5816	—	—
25	5705532	G044026	18-5816	—	—
30 JET non-handle	C159200	G589999	18-5818	—	—
35	6445653	C159199	18-5817	18-5817	—
35 (w/ 1 trim ram)	C159200	& UP	18-5817	—	18-5729
40	2874704	5556229	18-5836	—	—
40	5556230	5823917	18-5815	—	—
40	5823918	G053313	18-5817	—	—
40	G053314	& UP	18-5816 ⑤	—	—
40 4 Cyl. (w/solenoids)	C159200	& UP	18-5816	18-5820	—
40 4 Cyl. (w/relays)	C159200	& UP	18-5816	—	18-5737
45 4 Cyl. (w/o circuit breaker)	5531630	6146848	18-5815	18-5815	—
45 4 Cyl. (w/circuit breaker)	5531630	6146848	18-5815	18-5817	—
45 4 Cyl. (w/o circuit breaker)	6146849	& UP	18-5817	18-5815 ①	—
45 4 Cyl. (w/circuit breaker)	6146849	& UP	18-5817	18-5817	—

① Use 18-5817/AP# 2718 for applications with circuit breaker and fuse. ⑤ For design II applications use 18-5820.

APPLICATION CONTINUED ON NEXT PAGE